

LAN Setup

1. Connecting AC power and the network line to the 3300F mainframe, connect the other side of the network line to the HUB.
2. Run the ETM.EXE which bellows the path of the LAN on the CDROM drive, it will show as fig D2-1 if not, please press F5 to search again, or check the first step was succeed or not.

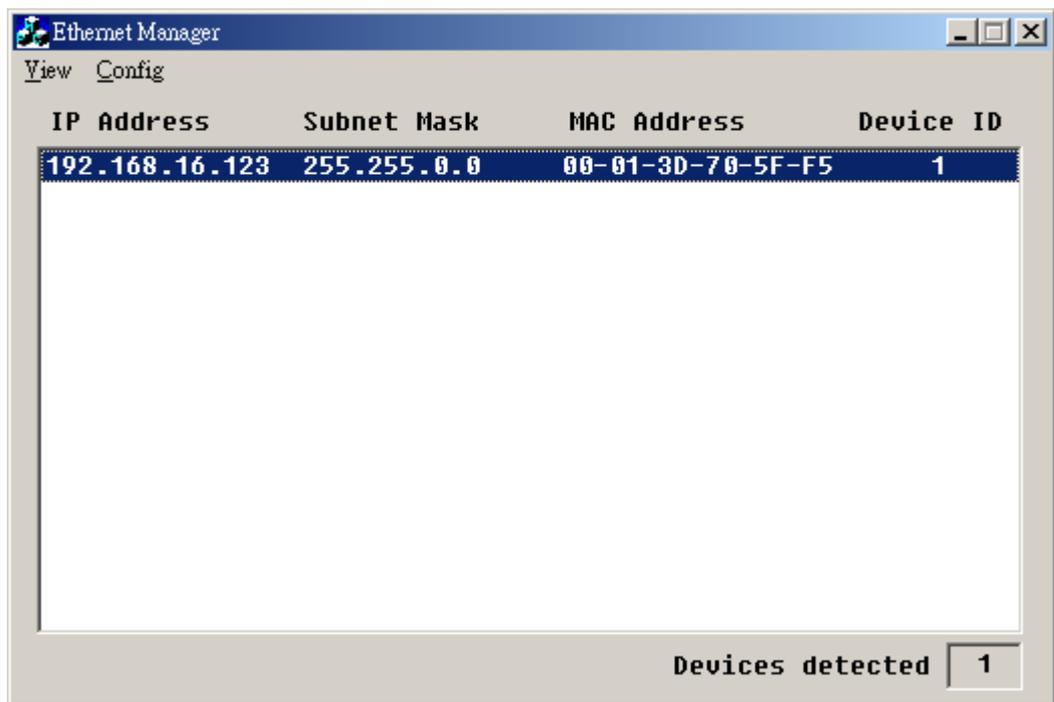



Fig D2-1

3. It will be shown the installation which has been searched on the screen, click it and select the Set IP Address bellows Config :



4. Set an useful IP Address and Subnet Mask.

5.It will be shown the Setup Device as the following figure if all steps was corrected to be run.

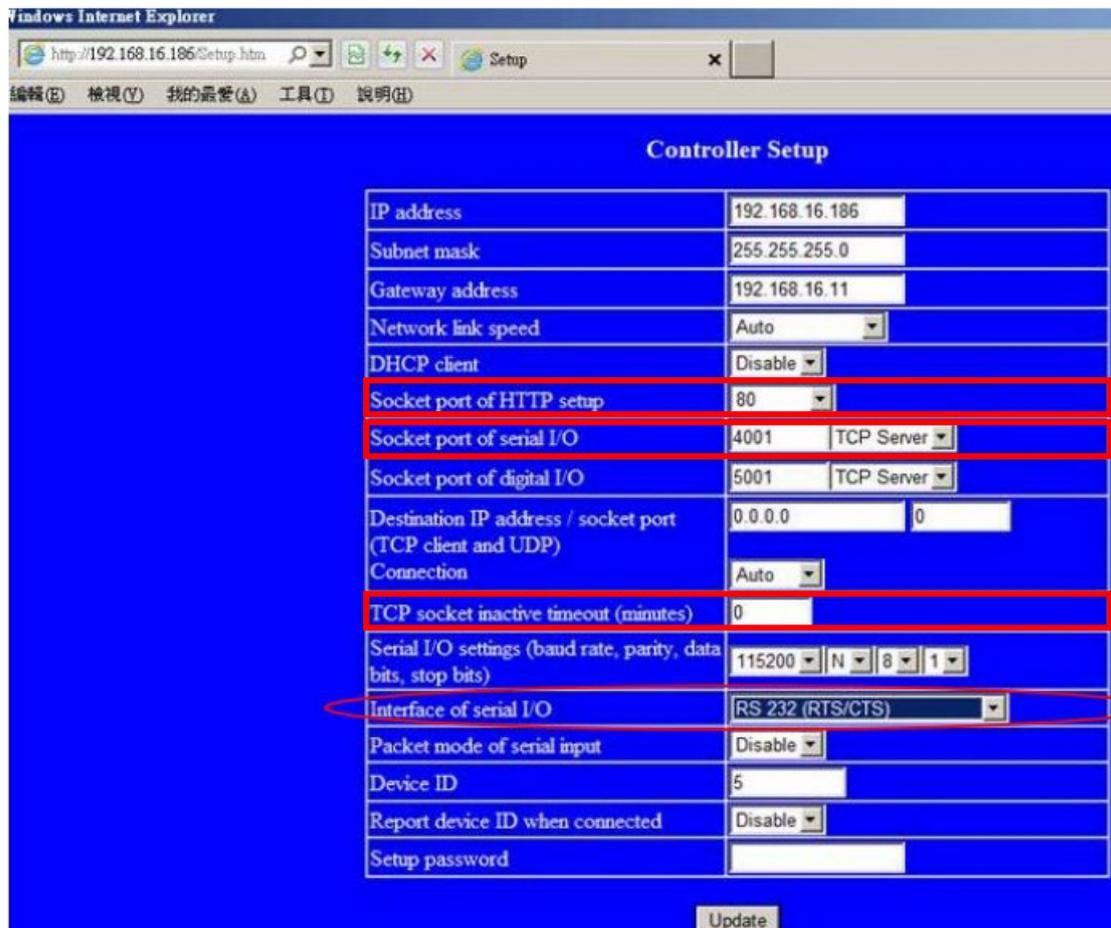

6.Insert the numbers as the following :

- i.IP Address
- ii.Subnet Mask
- iii.Gateway Address
- iv.Network link speed : AUTO
- v.DHCP client :The DHCP is set Disable
- vi.Socket port of HTTP setup : It is set to be 80 , don't need to change
- vii.Socket port of serial I/O : Set it to be 4001
- viii.Socket port of digital I/O : Set it to be 5001
- ix.Destination IP address / socket port (TCP client and UDP) Connection :
Don't need to change
- x.Serial I/O settings (baud rate, parity, data, bits, stop bits) :Insert 115200, N, 8, 1
- xi.Interface of serial I/O : Set RS-232(RTS/CTS)

xii.Packet mode of serial input : It is set to be Disable

xiii.Device ID : It is set to be 5

xiv.Setup password : Not required.

xv. Access password : Not required.

Note: Do not set the HTTP port to 81. Setting it to 81 will cause the interface card to be locked. If the interface card is locked, it must be sent back to be unlocked.